

### Start of the unit

- Connect all hose connections
- Connect remote control cable and connections
- Check the “safety valve”
- Fill the compartments of the liner wash tank with clear water
- Check all oil levels (marked red)
- Switch “main on/off” on the main control panel to “on”
- Switch “linerswash on/off” on the main control panel to “on”
- Check the liner wash if it’s flushing
- Push “push to start” when turning the key
- Let the engine idle for 10 min.

**If the pump is running make sure that the generator is running between 1600 and 2100 rpm**

**Always switch booster pump to “on” before running the pump**

- Check booster pressure min. 2 bar max 3.5 bar
- Never let the ignition switched on for longer than 1 minute if the engine is not running
- Lock doors at night
- Clear liner wash tank daily

**Ideal RPM for generator is between 1600-2100 rpm**

**Shut down of the unit,**

1. Put pump in off position on panel local or remote
2. Select local on main panel
3. Stop engine on main panel
4. Turn off mass switch

**During operation frequently check:**

- Liner wash liquid level visually
- Pump general inspection
- High pressure hose ad connections
- Suction hose and connections